

Copyright©2008 Haier Telecom Co., Ltd

All Rights Reserved

Reproduction, transfer, distribution or storage of part or all of the contents in this document in any form without the prior written permission as Haier Telecom Co., Ltd.










Statement

The contents of this manual maybe different with the cell phone please according the cell phone.

Haier Telecom reserves the right to revise this document or withdraw it at any time without prior notice.

Safety Precautions

Please read these simple guidelines. Not following them may be dangerous or illegal. For further information, see the section of 'Warnings and Precautions'.

	Do not switch the phone on when Mobile Phone use is prohibited or when it may cause interference or danger.
	Do not place your phone and its accessories in containers with strong electromagnetic field.
	Obey all local laws. Always keep your hands free to operate the vehicle while driving. Your first consideration while driving should be road safety.
	Hospitals or health care facilities may be using equipment that could be sensitive to external radio frequency energy. Follow any regulations or rules in force.
	Do not use the phone at a refueling point. Do not use near fuel or chemicals.
	Follow any restrictions. Wireless devices can cause interference in aircraft.
	Keep the phone and all its parts, including accessories, out of the reach of small children.
	Use only approved batteries and chargers. Disconnect the charger from the power source when it is not in use. Do not leave the battery connected to a charger for more than a week, since overcharging may shorten its life.
	Only qualified personnel should service the phone or install the phone in a vehicle. Faulty installation or service may be dangerous and may invalidate any warranty applicable to the device.

Contents

1 Getting to Know Your Phone.....	1
2 Getting Started	5
3 Basic Functions.....	6
4 Text Entry	10
5 Contacts	11
6 Messages	14
7 Call history	17
8 Settings	18
9 Profiles	23
10 Fun&Utilities	24
11 Games.....	26
12 Enhanced services.....	27
13 Care And Maintain	28

1 Getting to Know Your Phone

Packing list

Your phone package box contains the following items:

- Please refer to the packing list on the last page.

Basic specification

- Size: 100 mm [L] × 43.5 mm [W] × 13.6 mm [H]
- Weight: 65g (including 800 mAh Li-polymer battery)
- Standby Time: about 200 hours
- Talking Time: about 4.5 hours

Notice:

Standby time is the handset continuous working time without making phone calls. Standby time and talking time are both depending on mobile phone using situations, network situations and environments.

Mobile phone appearance
Mobile phone view





















The appearance of the mobile phone and introductions

Name	Description
Left soft key	In standby mode, press left soft key to Main menu.
Right soft key	In standby mode, press right soft key to Contacts list.
Navigation keys (Up key)	In standby mode, short press up key will show the FM menu.
Navigation keys (Down key)	In standby status, press down key to show Scheduler menu.
Navigation keys (Left key)	In standby mode, press left key to show Settings menu.
Navigation keys (Right key)	In standby mode, press right key to show Messages menu.
Send key	Making or answering a call. In standby mode, press this key to access the All calls screen.
End (Power) key	End calls or reject calls. Long press: Power on, power off.
Number keys	Enter numbers, letters, and some special characters. In standby mode, press and hold [1] to access your voice mail server. The key '0' can be used to input the '+' for international calls and to input space.
* key	In standby mode, long press this key to lock the keypad; short press this key to Input the symbol '* '.
# key	In standby mode, long press this key to enable or disable the vibration mode; short press this key to Input the symbol '# '.
Charger connector	Plug the travel adapter into the charger connector.
Headset hole	Before using headset, pull in the headset to this hole.

 Notice:

Long press means pressing key more than or equal 2 seconds; short press means pressing key less than 2 seconds.

 
Icon bar

Icon	Description
	Indicating signal strength.
	Indicating in call status.
	Indicating without network.
	You have one or several missed call.
	You have enabled FM radio.
	Indicating the mobile phone is under roaming service mode.
	Indicating the keypad is locked.
	Indicating the phone is locked.
	You have one or several new text messages.
	You have one or several new voice mail.
	You have one or several new trash messages.
	Indicating full SMS.
	You have set the alarm clock.
	You have set the general mode.
	You have set the meeting mode.
	You have set the outdoor mode.
	You have set the silent mode.
	Indicating battery power level.


2 Getting Started

Install and charge the phone


1. Remove the battery cover



 
2. Insert the RUIM card



 3. Install the battery



 4. Plug the travel adapter into the phone



3 Basic Functions

Switching On/Off

- In the power off status, long press the **Power Key** to switch on the phone.
- In the power on status, long press the **Power Key** to switch off the phone.

Making phone call

Making phone call using the keypad

1. In the standby mode, enter the phone number you want to dial, and press the **Send Key** to make the call. To delete a character to the left of the cursor, press right soft key. To save the number, press left soft key and select **Save number**.
2. To end the call, press the **End Key**.

Making phone call using contacts

1. In the standby mode, press left soft key to access the **Main menu > Contacts**;
2. Select **List** to view the contacts list, and press **Up/Down key** to choose a contact, or select **Search** to search out the contact you want to call, either by name or by number.
3. Press the **Send Key** to make the phone call.

Making phone call using last dialled number

1. In the standby mode, press the **Send Key** to access the All calls screen.
2. Scroll to the number or name you wish to redial, and press the **Send Key**.

Making phone call using speed dial

In standby mode, long press a number key to make phone call. See chapter contacts for more information about configuring speed dial.

Making a conference call

Conference call is a network service that allows you to take part in a conference call with other participants.

1. Make a call to the first participant.
2. Enter the phone number of the second participant; or retrieve a number from your Contacts, press <Search> and find out the number you want to call.
3. Press the **Send Key**, the first participant is put on hold.
4. When the second participant picks up, press the **Send Key** to connect the calls. (After the conference is initiated, **Send key** can be used to switch between both parties).
5. To end the conference call, press the **End Key**.

Notice:

Whether conference ways calling can be enabled or not depends on whether the network provider supplies this function and whether you have applied for such function.

Answering the call

Answer or silence an incoming call

- 1.To answer the call, press the **Send Key** or select <Accept>. Press <Silence> to mute the ringing tone before you answer the call.
- 2.To reject the call, press the **End Key** or select <Reject>.

Adjust the earpiece volume

Press the navigation key of your phone to adjust the volume of the earpiece, during a call.

When adjusting the volume, a bar chart appears in the display indicating the volume level.

Answer a call with the keypad locked

To answer a call with the keypad locked, simply press the **Send Key**.

During the call, all features function as normal. When you end or reject the call, the keypad automatically locked again.

Operations during a call

During a call press left soft key and one of the following options: Contacts, Messages, DTMF on (off), New call, Mute on (off), Phone info, Voice privacy.

Keypad lock

The keypad lock can prevent you from accidental calls. If the keypad is locked, it unlocks when you receive a call. After the call, the lock automatically locked

again.

When the keypad is locked, calls may be possible to the official emergency number programmed in your phone.

Press [*] key for more then 2 seconds to unlock the keypad.

4Text Entry

Text input method

Your phone provides following text input methods:

- English input method: input English characters;
- Numeric input method: input numeric characters;

Input method	Icon	Letter case
Intelligent	EN	Upper case
	en	Lower case
	En	Word case text, only available at the beginning of a word.
Multi-tap (English)	Abc	Word/sentence case text, only available at the beginning of a word/sentence.
	ABC	Upper case
	abc	Lower case
Numeric	123	-

Change the input method

- Press [*] to switch between upper case, lower case and word/sentence case; Long press [*] to enter symbol list;
- Press [#] to switch between Intelligent, Multi-tap and Numeric mode.
- Press [1] to insert common symbol under the intelligent mode or multi-tap mode.

5Contacts

You can save names and phone numbers (contacts) in the phone memory or in the RUIM card memory.



Add new

1. In the standby mode, press left soft key to access the **Main menu > Contacts > Add new**;
2. Change the settings and enter information about the contact (saved in **Phone**).
3. In the **Add new** screen, you can input name, default, mobile number, home , office, E-mail, URL, Address and Note.
4. Press left soft key and one of the following: Edit and Save.

List

Display all of the contacts. It will show the contacts list arranged alphabetically, you can press the key corresponding to the first letter of the name to search. Use Add to blacklist menu to block some numbers for incoming calls. Use Add to whitelist menu to allow some numbers for incoming calls. Search for a record and press left soft key and one of the following: View ,Call, Send message,

Send card, Edit, Delete, Copy, Add to blacklist and Add to whitelist.

Search

In Contacts menu, choose Search and enter, there are two options: By name, By number. If you input the wrong name or the wrong number, the phone will inform you 'No match found'.

Groups

You can classify a number of contacts into one group in accordance with their social relationship, for example: RUIM, Family, Friend, Colleague, VIP, Custom and Default.

Highlight a group, press left soft key and one of the following options: Rename: Edit the group's name (RUIM and Default can not be renamed), Ringer, List, Add new (RUIM can not be added new).

Multicopy

1. In the standby mode, press left soft key to access the **Main menu > Contacts >Multicopy**;

2. The menu includes Copy all, Copy selected.

Speed dial

Use this menu to assign a speed dial number for your most frequently dialled numbers. In Idle mode, press and hold the appropriate key to dial the speed dial

12

entries.

Delete

1. In the standby mode, press left soft key to access the **Main menu > Contacts > Delete**;

2. Select **Delete all** to delete all contacts (when we select delete all we have to enter security code then we can delete all records, the security code is 0000).

Select **Delete selected** to select the contacts that you want to delete.

Storage Location

Use this feature to choose storing phone numbers on your RUIM card or in your phone's memory.

Memory status

Check the number of contacts you have stored in the phone's memory and on the RUIM card.

My number

Use this feature to check your phone number, or to assign a new number. Changes made here do not affect the actual subscriber numbers on your RUIM card.

6Messages

Your phone is capable of creating, sending and receiving text messages.



Write message

Choose the **Write Message** option in messages menu. Editing message is done in the text editing interface. Enter your message. Press left soft key to access the following options: Send, Insert symbol, Insert expression, Insert templates, Insert number, Save to draft.

Inbox

1. In the standby mode, press left soft key to access the **Main menu > Messages > Inbox**;
2. While viewing a message, press left soft key to access the following options: Read, Reply, Forward, Delete, Delete all.

Outbox

1. In the standby mode, press Delete all to access the **Main menu > Messages**

14

> Outbox;

2.While viewing a message, press left soft key to access the following options:
Read, Resend, Forward, Delete, Delete all.

Draft

You can read draft messages saved in Draft. Press left soft key to access the following options: Send, Delete and Delete all.

Trash

You can read Trash messages saved in Trash. Press left soft key to access the following options: Read, Delete and Delete all.

Archive

You can read archive messages saved in Archive. While viewing a message, press left soft key to access the following options: Read, Forward, Delete.

Templates

- 1.In the standby mode, press left soft key to access the **Main menu > Messages > Templates;**
- 2.Select the template message you want to use.
- 3.Press left soft key to edit, delete and send.

Delete messages

In the standby mode, press left soft key to access the **Main menu > Messages**

>**Delete messages** and one of the following options: Inbox, Outbox, Draft, Trash, Archive, Delete selected, Delete all.

Message settings

In the standby mode, press left soft key to access the **Main menu > Messages > Message setting** and one of the following options: Storage location, Priority, Delivery report, Maximum period, Validity period, Auto save, Auto delete and Reject SMS.

Memory status

View the amount of memory currently in use for messages.

Voice mail

The voice mailbox is a network service and you may need to subscribe to it. For more information and for your voice mailbox number, contact your service provider.

7Call history



Call history stores information about the last Missed calls, Received calls, or Dialed calls. It also adds the total duration of all calls. When the number of calls exceeds the maximum, the most last call replaces the oldest.

8Settings



The settings menu provides you with various setting options to customize the phone to your preferences and needs. You can also reset the settings to their default status.

Display

Wallpaper

You can set an image as wallpaper for the phone display.

In the standby mode, press left soft key to access the **Main menu >Settings >**

Display > Wallpaper and one of following:

Predefined wallpapers: Select predefined pictures for wallpaper.

Banner

Use this menu to choose whether the display shows a customized banner under the operation logo, when the phone is in the standby mode.

Backlight

You can control the time-out of the backlight on your phone.

Contrast

18

You can adjust the contrast of the display for varying lighting conditions.

Phone setting

Use this menu to change the setting of Auto keylock, Input setting, and Time format.

Auto keylock

Use this menu to set the keypad of your phone to lock automatically after a preset time delay when the phone is in the standby mode and no function of the phone has been used.

Input setting

Use this menu to set the default input method for editing.

Time format

Use this menu to change the time format and display on your phone.

Call setting

Answer call

Use this menu to set the phone answer call method. Press any key to answer call except left soft key [Silence], right soft key [Reject], End key. A compatible headset or enhancement needs to be attached to the device for the call to function properly.

Auto answer

Set the phone to answer the incoming call automatically after 5 sec.

Voice privacy

Use this menu to protect your voice content during a call.

Auto redial

Set the phone to make up to three attempts to redial a phone number after an unsuccessful call in the standby mode.

Call forward

This network service reroutes incoming calls to a phone number that you specify.

Call waiting

If your wireless provider supports this feature, call waiting notifies you of an incoming call even while you are in a call. You can accept, reject, or ignore the incoming call.

International prefix

The phone will replace + with '009' or the respective international call code of the country.

Call time

Use this menu to display or hide the call time during your conversation and call ended screen.

Firewall

Call

Use this menu to block or allow some numbers for incoming calls.

Private

Use this menu to protect your content of message, contacts, and call history for accessing by other person. To access the menu, you must enter the preset lock code. By default, the preset lock code is 0000.

Security

To access security for the every time, you must enter the preset lock code. By default, the preset lock code is 0000. If none of this work, contact your wireless service provider for help.

Phone lock

The phone lock feature protects your phone from unauthorized outgoing calls or unauthorized access to information stored in the phone. When phone is locked, to unlock user must enter the preset security code. When the device is locked, you can still call the official emergency number programmed into your phone.

PIN management

In the standby mode, press left soft key to access the Main menu >Settings > Security> PIN management and one of the following menus: Enable PIN, Disable PIN and Change PIN.

Change security code

By default, the preset lock code is 0000.

Call restriction

This network service allows you restrict your calls.

Factory reset

Use this menu to reset the phone's settings you have changed.

Clear memory

Use this menu to clear all data (include Call history, Contacts (Phone), Contacts (RUIIM) or Clear all) that you have stored.

Phone info

You can get S/W version, H/W version, and PRL version.

9Profiles



Profiles define how your phone reacts when you receive a call or message, and other settings for each of the available profiles can be left at their default settings, or customized to suit your needs. The following profiles are available: **General**, **Silent**, **Meeting** and **Outdoor**.

Activate

In the standby mode, press left soft key to access the **Main menu > Profiles > General**, **Silent**, **Meeting** or **Outdoor > Activate**;

Personalize

In the standby mode, press left soft key to access the **Main menu > Profiles > General**, **Silent**, **Meeting** or **Outdoor > Personalize** and one of following: Prompt, Ringers, Volume, Alerts.

Rename

In the standby mode, press left soft key to access the **Main menu > Profiles > General**, **Silent**, **Meeting** or **Outdoor > Rename** and edit the name.

10Fun&Utilities



Your phone contains features to help organize your life, including Alarm, Scheduler, Calculator, Stopwatch and FM.

Alarm

Use this menu to set alarms. The alert type for a normal alarm corresponds to the call alert type settings.

Scheduler

Use this menu to enable you to keep track of reminders. It can even sound an alarm for any of these events.

Calculator

Use this menu to perform basic arithmetic functions, such as addition, subtraction, multiplication, and division.

Stopwatch

Press the left soft key function button the start the time counting; press the left soft key button again to suspend the time counting; Press the end key to standby status.

24

FM

The FM depends on an antenna other than the wireless device's antenna. A compatible headset or enhancement needs to be attached to the device for the radio to function properly.

11Games



Two games are provided in the phone, including LinkLong and MagicBlock.

12Enhanced services



This UTK option allows you to access a range of SMS based services that help you do more. Simply select the desired service from the service menu. To get the list of services available for your handset or for assistance on any of these services. There are different menus according to different RUIM cards.

13Care And Maintain

If your mobile phone had abnormal conditions, please check it with the following table. If the problem still remains, please ask mobile phone sales for help.

Common problems	Check item
Can not charge	Please checks if the charger is properly connect to the phone and the power source jack.
Can not power on	Please check if the battery level is too low; Please check if the battery is properly loaded; Please press Power Key enough time.
Insert the R-UIM card but can not read the information in the R-UIMcard	Please check if properly inserted the R-UIM card; Please check if your R-UIM card is valid.
Can not make phone call	Please check if the phone number is valid. Please check if you are in service area.
Weak talk quality	Please check if the phone signal is strong enough; if you are in the building, please move the phone or move near the window.
The contact can not get your voice when making phone call	Please check if your mike has blocked by fittings or other blocks.
The screen display the information such as 'No Service'	Please check if you are in a weak signal area (in the channel or surround by buildings), change the area and retry. Please check if you can try to get the services without the service provider permission. If needed the service, please contact the service provider for more information.

Haier Mobile Packing List (HC-C2001)

No	Content	Quantity/unit
1	Handset	1pc
2	Battery	1pc
3	Travel Charger	1pc
4	User manual	1pc
5	Warranty Terms	1pc
6	Headset	1pc

