
LAVA MOBILE PHONE

iris Icon

USER MANUAL

©2015. All rights are reserved. No part of this document may be reproduced without permission.

While all efforts have been made to ensure the accuracy of all the contents in this manual, we assume no liability for errors or omissions or statements of any kind in this manual, whether such errors or omissions or statements resulting from negligence, accidents, or any other cause. The contents of this manual are subject to change without notice.

Protect our environment! We strive to produce products in compliance with global environmental standards. Please consult your local authorities for proper disposal.

Note: User Manual is just to guide the user about the functionality of the phone. It is not a certificate of technology. Some functions may vary due to modifications and upgrade of software, or due to print mistake.

Content

Welcome	5
For Your Safety.....	2
Your phone & Key parts.....	8
Screen & Icons.....	9
Use Notification Panel	12
Getting Started	10
Inserting the SIM card and SD card.....	11
Switch On/Off.....	8
Unlock SIM Card	12
Connection to Network	13
Charging the Battery.....	13
Basic Functions.....	13
Make Calls.....	13
Answer Calls.....	14
Phone.....	14
People.....	14
Messages.....	11
Email	15
Browser.....	15
Calculator.....	15
Calendar.....	12

Clock	16
Camera.....	16
FM Radio.....	17
Music.....	17
Sound Recorder.....	17
Videos.....	17
Gallery.....	17
File Manager.....	17
Maps.....	17
Play Store.....	18
SIM Toolkit.....	18
Downloads.....	18
Settings.....	18
Frequently Asked Questions and Troubleshooting.....	22
Safety Information and Notices.....	23
Emergency call.....	23
For your safety.....	23
Care and Maintenance.....	24
Pacemaker.....	26
SAR.....	26
LAVA WARRANTY CERTIFICATE.....	28

Welcome

Congratulations on your purchase of the LAVA mobile phone. Your phone provides many functions which are practical for daily use, such as a hands-free loudspeaker, camera, MP3 player, video recorder, and more. Your phone can also connect to a PC, laptop, or other device using a USB data cable.

You can read the manual to understand how to use **iris Icon** mobile phone and experience the well-established functions and simple operation method. Please use the original accessory in order to achieve the best use of effects. Use of non-original components results in of the damage caused of by machinery, in which case Lava shall not be responsible.

LAVA support and contact Information

Check www.Lavamobiles.com web site for additional information, downloads, and services related to your LAVA product.

To check for the nearest LAVA service center location for maintenance services, you may like to visit www.lavamobiles.com

For Your Safety

Before using your phone, please read the following important information to eliminate or reduce any possibility of causing damage and personal injury.

**Lava Customer Care:
No: 1860-200-7500**

For Your Safety

	<p>Safe power on Do not use your mobile phone where it is forbidden to use or it might cause disturbance or danger.</p>
	<p>Safe transportation first Please observe all local laws and regulations. Do not use your mobile phone while driving. Safe transportation should be considered first when driving.</p>
	<p>Disturbance Mobile phone's performances may fluctuate during a disturbance.</p>
	<p>Turn off when in the hospital Please follow location-specific applicable limitations. Please switch your mobile phone off when near a medical instrument.</p>
	<p>Turn off on an airplane Please follow location-specific applicable limitations. Do not use your mobile phone on an airplane.</p>
	<p>Turn off when at a gasoline station Do not use your mobile phone at a filling station or around fuels or chemicals.</p>
	<p>Turn off around exposure Area Please observe location-specific applicable limitations Do not use your mobile phone near an area where explosions can occur.</p>
	<p>Proper use As described in this manual, your mobile phone can be used only in the locations free from mobile phone usage restrictions. Please do not touch the antenna area of your phone.</p>
	<p>Use qualified after sales service Only a qualified technician can install or repair your mobile phone. Please contact LAVA authorized service center in case of phone failure.</p>
	<p>Accessories and batteries Only use the authorized accessories and batteries.</p>

	<p>Waterproof Your mobile phone as well as battery is not waterproof. Please keep it away from water.</p>
	<p>Backup Remember to make a backup or keep a written record of all important information saved in your mobile phone.</p>
	<p>Connect to other devices Please read the user manual of the device to get more detailed security instructions before connecting to other devices and do not connect to an incompatible product.</p>
	<p>SOS emergency calls Make sure your mobile phone is switched on and in a service area. In idle mode, input the SOS number; then press the Dial Key. Advise where you are and do not hang up without permission.</p>

Improper use will invalidate the warranty! These safety instructions also apply to original accessories.

Your phone & Key parts



Label	Key	Description
1	SD Card Slot	To Insert your SD Card
2	Menu Key	To Obtain more operations
3	Home Key	To Return Home screen
4	Back Key	To Return back to previous screen
5	SIM Card Slot	To Insert your SIM Card
6	Volume Key	To adjust incoming call ringtone volume. During a call, playing music, video, or listening to radio, press the keys to adjust volume.
7	Power Key/Lock key	Press and hold to turn on/off phone Press to lock/unlock the screen
8	Camera	Camera Lens
9	Flash light	Flash light

Screen & Icons

This phone provides multiple Standby screens. Through the instruction and various icons on the screen, you can have the operating information needed.

Status Icon	Description
	Signal indicator for SIM
	Using headset
	Mute
	Vibrate mode
	Alarm
	Background playing / pausing
	Memory card installed
	Bluetooth on
	Device connected via USB
H	3G

Getting Started

Please read the safety instructions in the "Safety Information and Notices" section before use.

How to Remove SIM card and SD card?

- **Your Back Cover is "NONREMOVABLE".**


NOTE: In Order to insert or remove SIM card/SD Card from their slots please don't try to remove back cover from the Device.

Follow the below method to remove SIM card/SD card from your phone




SIM Extractor

1. Gently Insert SIM extractor into the given pin hole which is provided on the phone, until it takes out the SIM Slot Tray.

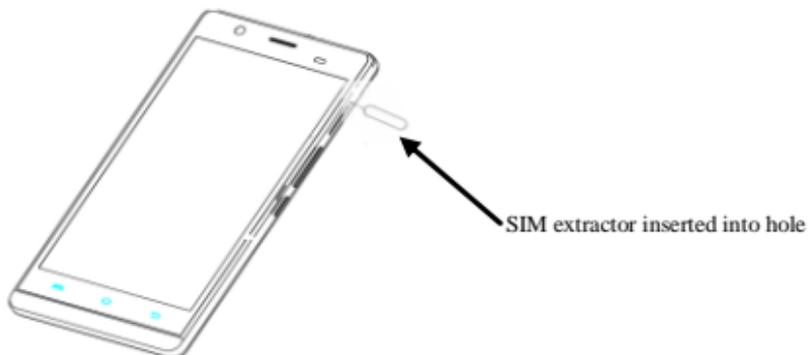

-
2. Now it will be easy for you to take out the SIM slot tray.
Follow the same method for removing your SD Card.

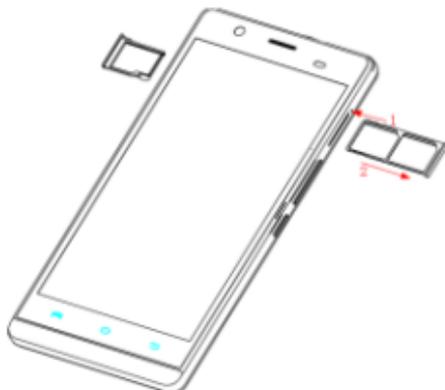


Inserting the SIM card and SD card

1. After taking out the SIM slot Tray from the phone make sure that the clipped corner of your SIM card is facing the correct direction.
2. Keep the SIM cards into the given SIM slots.
3. Now Push the SIM Tray inside as shown below.
4. Now your device is ready with SIM card

Please follow the same procedure for inserting the SD Card

Warning: Use only compatible memory cards for use with this device. Incompatible memory cards may damage the card or the device and corrupt the data stored in the card.

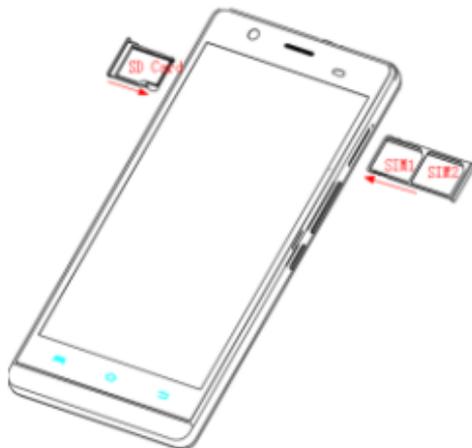

Switch On/Off


- **Long press the power key to switch on/off the phone.**

After inserting the SIM card, the screen will show the notes in the following order when the phone is switched on:

1. **Search**—It means Your handset is searching for proper network connection.

Use Notification Panel

As a new notification appears in the notification area, slide down in the area to view the contents of the notification.

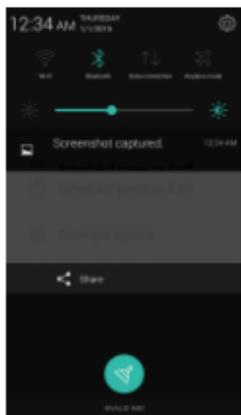

Unlock SIM Card

To avoid illegal use, the SIM card is protected with PIN (personal identification number).

When this function is ON and you have already set up your PIN code, you will need to type the PIN code for every attempt.

- Now the handset is switched on and you can use the handset.
- You can turn off the SIM PIN code. In this situation, the SIM card can't be prevented from illegal use.
- Input PIN code, press arrow head icon to erase typing error and then press OK to end typing. For example, if the PIN code is set as 1234, then type "1234" then press OK.

The SIM card will be locked if you type the wrong code for three times continuously.

Now handset will ask you to type the PUK code.

Attention: Your network provider will set a standard PIN code (four to eight numbers) for your SIM card.

- ❖ **It is recommended to change the code into a personal code.**

Connection to Network

When the SIM card is successfully unlocked, the handset will automatically search for available network (the lock screen shows searching). The handset will show the information of the network provider; the status bar will show the signal strength and the network condition once the handset is successfully connected to a network.

Note: If the lock screen shows "Emergency", it means that

- You are out of network coverage area (service coverage)
- You have not inserted the SIM.
- Your card is not valid.
- You can only have emergency calls..

Charging the Battery

❖ **Your Phone has "NON REMOVABLE Battery" and NON Removable Back cover.**

❖ **Please don't try to remove Back cover to take out the battery.**

❖ **On emergency condition :Press power key + Volume Key for a 10Seconds together.**

1. Plug one end of the charger into phone.
2. Connect another end of the charger to the socket.
3. Start charging. It can be charged whether power on or power off.

❖ **In power on state**, when the battery icon on screen start rolling means it is been charged. When the icon is full and stop rolling means charge is completed.

❖ **In power off state**, the battery icon on screen start rolling means it is been charged. When the icon is full and stop rolling means charge is completed.

4. Unplug the charger from the socket.
5. Disconnect the charger and phone. Note: If the battery is Zero charged, the battery icon will reappear after a few minutes of charging.

Basic Functions

Make Calls

When the network provider icon appears on the screen, you can call or answer the calls.

The indicator on the upper right part will show you the signal strength.

Make Domestic Calls

- Use keyboard to enter the phone number and then press Dial icon to call.
- If you want to change the phone number, please press the delete key on the touch screen to delete that number.

- When the call is answered, the screen will show the connection status.

Make International Calls

If you want to make an international call, then long press on the 0 key on the keyboard until there appears the sign "+" for international call prefix.

You can make an international call by typing in below format:

+ > **country code**

> **Type the complete phone number**

> **Dialing icon** (type in the prefix code, and then continue to enter the country code and complete phone number). Country code usually follows conventional practice: India 91, German is 49, Britain 44, Sweden 46 and so on.

Make Listed Calls

- Every dialed and received phone number is recorded in the call history list. Recently dialed, answered and missed phone numbers are chronologically (newest to oldest) listed in the "all" log.
- You can also choose and check missed, answered and dialed call list according to your need.
- Listed phone numbers can be called out by pressing the respective call log list.
- Press the small icon on the right side to enter the details interface of the log.
- In the call history interface, users can do a long press to save or delete the number. In the detailed interface, the phone number save function is preset.

Emergency Calls

You can call emergency service number directly without SIM card. Different networks use different emergency numbers. Please query your network operator.

Answer Calls

Drag the icon to answer an incoming call.

Phone

Enter the phone number on the keypad, and press Dial icon. You can also check the history call logs by pressing more options at the top of the right corner.

You can swipe the number in your recently dialed screen to right side for making a call.

People

By Entering into the People, you can check all the contacts, search for contacts and add new contact.

New contact means a newly added phone number that is saved in the SIM card or in the handset.

When adding a new contact, you can type the name, address, phone number, other phone

number, work place, other email address and so on.
You can also check contact group and favorites.

Messages

Compose new message

- Press new message button to get a new text message.
- You can use the virtual keyboard in order to type the message.
- Press the number frame and enter the number or you can simply add the stored contact from your Contacts.

After editing, press send icon to send the text.

Press clips icon to Add subject, pictures, videos, audio and more operations.

Message Settings

This included storage settings, SMS settings, MMS settings, notification settings, service message setting and so on.

Email

You can use Email to send and receive emails.

• Setup Email Account

Firstly you need to set up your Email account.

• Check Emails

In the Inbox, select the email you want to check to enter. Press the icons to do the options such as delete, reply, etc.

• Compose and Send Email

In the Inbox, press new mail icon to create new email. Input receiver email address, subject, and content, and then press send icon to send the email.

Browser

Through a web browser, you can connect to the internet, Internet settings are default to MTN SIM card.

In the browser, you can open the page by the following methods:

- Click on the browser address bar, input for the open web site. Click.
- Touch the menu key-> bookmarks, choose need to open the bookmarks or click on the most visited/history records.

Calculator

The handset is provided with a calculator with basic functions. You can carry out the operations for plus, minus, multiply, and divide by pressing the screen. You can use some functions in the advanced panel.

Note: The accuracy is limited and round-off error may occur.

Calendar


Enter the calendar menu and there shall appear a calendar on the screen with the current date marked out by background frame with a special color. Press the touch screen to browse date and the calendar information on the screen shall be correspondingly updated.

Clock

Enter the clock application, press alarm icon and press Add alarm to add a new alarm. Scroll the scrollbar to set alarm time. Press alarm of list to edit the activation, Time, Ringtone, vibrate and label. If you want to delete the alarm, long press on the list and choose the alarms that needs to be deleted and click in Delete icon. .

Camera

Your mobile phone is equipped with a high vivid camera picture which you can use to take pictures at any time or place and then save them on your mobile phone, use them as your mobile phone wallpaper or send them to your friends .Under camera viewing mode, you can perform the following operations.

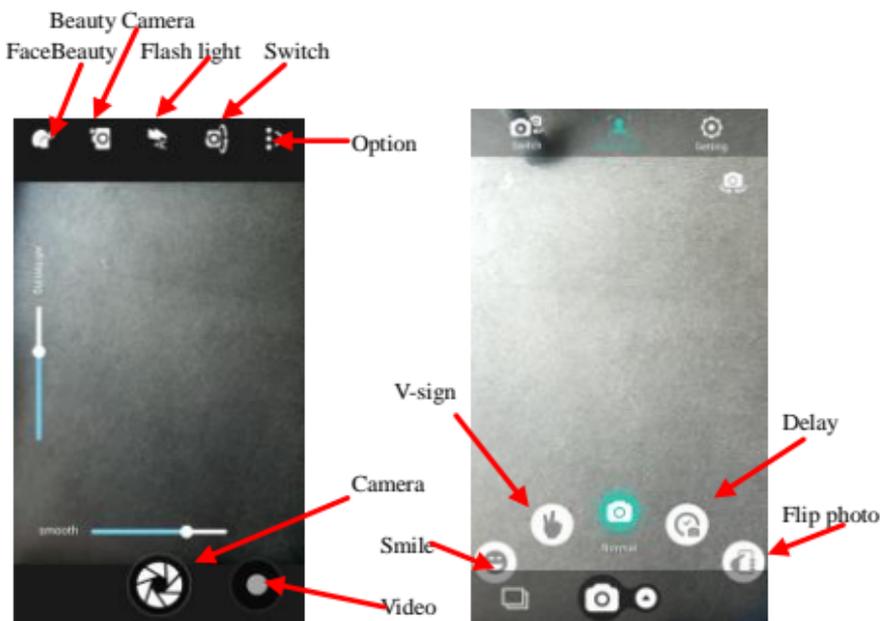

Different Viewing Modes

- ❖ Face beauty mode: it can make your picture more beautiful
- ❖ Change the mode of flash light: auto mode, off mode, on mode.
- ❖ Switch the camera between front and back.
- ❖ Option icon, such as: normal mode, smile shot mode, setting.
- ❖ Thumbnail icon shows the currently captured picture or video.
- ❖ Press the Capture icon to capture a picture.
- ❖ Press the recording icon to take a video.

FM Radio

Make sure the headset, which is used as the antenna, is plugged in before using the FM radio.

Music

Use the Music player to play music files. The songs saved in your phone can be played using the Music Player of the device.

Sound Recorder

Press Recording icon in order to record your voice or any music file. In the middle of the screen is a timer.

Press the Stop Key to stop the recording and select the save option to save the recording. You can press play key to listen the recording before selecting "Save/Cancel".

Videos

To play videos, enter the video list, scroll the screen to browse and choose the file which you want to play.

Gallery

In the gallery interface you can view different folders.

- Press the image or video to view pictures or videos.
- After selecting any picture or video You can Tap menu key in order to perform various functions like to send, Edit, Print, Rotate left or right, Crop, Set picture as and Details.

File Manager

You can manage file, including Download, Music, and Received File. Tap to create a new folder or select folders to copy, move and delete.

Maps

The phone provides you the maps service so that you can reach to your destination by just addressing your current place, destination place and your mode of travelling.

Play Store

Play Store is in-built application store, you can also pick apps and download it from play store.

SIM Toolkit

The contents in this menu will differ according to different network providers. For detailed information, please check inside the menu.

Downloads

You can check the downloaded or being-downloading content.

Settings

1.SIM Management

The contents in this menu will differ according to different network providers. For detailed information, please check inside the phone menu.

2. Wi-Fi

Connect to a wireless network by entering the correct password. You can then access internet over WiFi instead of Mobile data.

3. Bluetooth

Through Bluetooth, you can transfer data between your phone and other Bluetooth devices.

You can also listen to music on the phone by using a Bluetooth headset.

4. HotKnot

- By using this feature you can exchange all data between two devices by simply touching the two devices.
- The data-transmission technology only requires two pieces of Hot Knot-featured touch panels.
- It means you can send and receive Data through Hot Knot only when both the senders and the receiver devices support the Hot Knot function.



Follow the below steps to send files via Hot Knot:

- You have another device which support Hot Knot then turn ON both devices Hot Knot

feature.

- Select the picture or other data which you want to send
- Go to option menu.
- click  this button to share the data.
- Keep both devices facing in and make contact with each other till they both connected via hot knot

In this way you can send Files within few seconds

5. Data usage

You can check the data usage of your SIM card.

6. More

More Includes Airplane mode, VPN, Tethering & portable hotspot, Mobile networks and Network prefer mode.

7. Display

As per your choice you can change the Brightness, Scenes, Wallpaper, Theme, Auto-rotate screen, Sleep and Font size of your device.

8. Storage

It Includes the SD card storage, available storage.

Insert SD card (If a SD card has been already inserted, then this option will become "Unmount SD card "), format SD card and all available storage in the internal storage space.

9. Battery


It will show the battery Percentage and other information related to battery.

10. Custom gesture:

On screen scroll down top left 1cm screen for using this feature.


You can create a gesture for the custom task.

- Click the New button to create new gesture.
- Select the Custom task for the gesture you have created.
- Draw a gesture on the gestures panel.
- click Done to save the gesture.
- Now you can slide down to launch the gestures panel at any place, draw the created gesture to run the relative custom task.

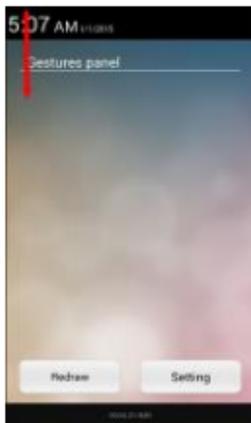

11. Black Screen Gesture

- Turn on this feature
- Create the gesture on the black screen,
- Assign Gesture to a particular Application
- Turn off the Screen
- Create a Gesture on black screen
- If the gesture matches with the created gesture, it will launch the related app.

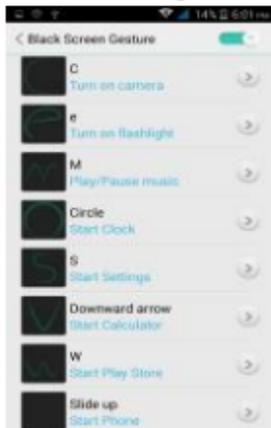

Black Screen Gesture

12. Accounts & sync

Include general synchronization settings and account management. The general synchronization settings include background data and automatic synchronization. You can also choose to add new account. After adding new account, you can do operations like synchronizing the calendar and contacts.

13. Location services

Locate your position through tools like wireless network and GPS satellite.

14. Security

Change the settings of Screen security, Encryption, SIM card lock, Passwords, Device administration and Credential storage.

15. Screen lock settings

Pattern:

You can unlock the screen through designed pattern. Draw a private pattern to unlock the screen to privatize your phone.

PIN: type the PIN numbers to unlock the screen.

16. Language & input

It will include the Language, Keyboard & Input methods..

17. Backup & reset

- ❖ Back up my data: back up app data, WIFI passwords, and other settings to Google Service.
- ❖ Automatic restore: When reinstalling an app restore backed up settings and data.
- ❖ Factory data reset: Erases all the data on your phone.

18. Date & time

- Automatic: Use networks offer a time and date.
- Set date: Manually edit date.
- Select time zone: Manually choose time zone.
- Set time: Manual set a time.
- Use 24-hour format: set Open/close.

19. Accessibility

Power button: press power button to end calls.

20. About phone

It will include Software update, Status, Legal information, Model number, Android version. Through Software Update you can download and install the latest Software for your device.

- ❖ To update latest software version you need internet connection.

Frequently Asked Questions and Troubleshooting

Questions	Cause and Solution
Unable to turn on phone	<p>Press the power on key for over 1 second.</p> <p>Check if the battery is properly connected. Please remove and install it again, retry to turn on</p> <p>Check if battery is appropriately charged</p>
Unable to connect to network	<p>Weak signal. Please Try and move to a location with strong signal and try connecting to the network again;</p> <p>Please ensure that you are not beyond the network coverage of service providers;</p> <p>Please ensure you have a valid SIM card. Please contact your network provider for further information</p>
Display information while turning on	<p>Check if the SIM card (insert the SIM card) is installed correctly</p> <p>Handset lock password: If the handset lock is activated, you have to input handset password before using.</p> <p>Input PIN: Inputting PIN while turning on each time is activated, you have to input the PIN code.</p> <p>Input PUK code: Having input wrong PIN code for 3 times straight will lock the SIM card. You need to input the PUK code provided by your network provider.</p>
Poor quality of calling	<p>Please check if the sound volume is tuned improperly</p> <p>In an area with poor receiving condition, example: basement, the signal might be weak. Try reaching a location with stronger signal reception and call again.</p> <p>While using the mobile phone in the peak period of communication, like commute time, you may be unable to call because of line congestion.</p>
Standby duration shortened	<p>The standby duration is relative to the system setting of network.</p> <p>While the mobile phone is in an area with poor signal strength and cannot receive the signal, the handset will continuously search for a base station. This will significantly reduce battery charge. It is recommended that you turn off your mobile in area with no signal reception to save battery.</p> <p>Need replacing the battery. Please change a new battery.</p>
SIM Card Error	<p>Dirt on the metal surface of an SIM card. Use clean cloth to wipe the metal touch point on an SIM card.</p> <p>The SIM card is not installed.</p> <p>The SIM card is damaged. Please contact your network service provider.</p>

Unable to dial out	Please confirm if you pressed the dial key after dialing. Please confirm if calling is forbidden because of default settings. Please confirm if the SIM is valid. Please confirm if the call barring is set. Please confirm if the fixed dial function is set.
Callers unable to contact you	Please confirm if the mobile phone is on and connected with the network. Please confirm if calling is forbidden because of defaulting. Please confirm if the SIM card is valid. Please confirm if the call barring is set.
Unable to charge handset	Poor contact. Please check if the plug is connected well. Please confirm if the environment temperature is within the range of 0°C ~40°C while charging. The battery or charger is damaged. You need to replace it.
Unable to set some functions	Wrong operation. The network provider does not support the function, or you have not applied for it.
Forced Shutdown	When your phone hanged, you can press the Power key and Volume Down Key within 10 seconds to force the phone to power off, then you can press the Power key to turn on.

Note: If the instruction above cannot help you solve problems, please note:

Mobile phone model and serial number

Specific content of warranty

Clear statement of problems

Then contact your local dealer or a LAVA authorized service center in your area.

Safety Information and Notices

Emergency call

If any emergency arises, dial 100 (or other emergency call number) for emergency help.

Note:

- The success of emergency call is not guaranteed.(depends on network coverage area)

For your safety

- Switch off the phone in hospitals and aircraft. Obey any restrictions. Wireless devices can affect the medical treatment and cause interference in aircraft.
- Some medical devices such as hearing aids and pacemaker may be sensitive to external radio frequency emissions. Consult the device manufacturers or your doctor before using the phone around the medical devices.
- Pay special attention to the ring tone volume and vibration settings if you have a heart problem.
- In areas with potentially explosive atmosphere, such as gas stations, fuel or chemical

transfer or storage facilities, obey all signs and instructions.

- Your phone will emit radio frequency even in the standby mode. Turn off your phone when so instructed.
- Always obey all the local laws and regulations. Do not use your phone while driving. Use Hands-free operation, if available, and give full attention to driving and to the road. Pull off the road and park before making or answering a call if driving conditions so require.
- If your phone is lost or stolen, notify your service provider immediately to stop the SIM card from being used.
- To prevent your phone from misuse, lock your SIM card or phone, and change passwords when necessary.

Notes on phone usage.

- Using the phone near television, land phone, radio and office automatic devices may cause interference and affect the function of the mobile phone.
- Keep the phone dry; all kinds of liquid can erode electronic circuit.
- Keep the phone away from extreme temperatures.
- Keep the phone away from fire or a lighted cigarette.
- Do not paint the phone.
- Do not drop the phone or violently crush or shake the phone.
- Do not keep the phone near magcards and other object with magnetism. The phone's magnetism may clear the information stored on floppy disk, pre-paid phone card and credit card.
- Keep the phone away from hot places where the temperature may exceed 50°C, such as dashboard, windowsill, or areas exposed to direct sunlight.
- Do not disassemble or modify your phone. This can damage the phone, cause leakage and break the internal circuit.
- Use only damp cloth or non-static cloth to clean your phone.
- Do not use alcohol, thinner, benzene or other chemicals or abrasive cleaner to clean your phone.
- The phone will become warm under normal use and while in battery charging.
- Do not leave the phone with battery uninstalled or with the battery empty for a long period of time. This may cause data loss.
- The metal parts of the phone may irritate your skin depending on your health condition.
- Do not put the phone in the back pocket. Sitting on it may damage the phone. Do not put the phone at the bottom of a bag. You may crush it.
- When the vibrate mode is on, place the phone carefully to prevent it from being dropped from a height or being moved to a heat source due to the vibrating.
- Do not press the touch screen with needles, pen point or other sharp objects; it can damage the LCD and violate the terms and conditions of the warranty.

Care and Maintenance

❖ Battery Care

- Your device is powered by a rechargeable battery. When the power is weak, please charge the battery. In order to extend the lifespan of the battery, use all the battery's power before recharging.
- Unplug the charger from the electrical plug and the device when not in use. Do not leave the battery connected to a charger more than a day. Overcharging may shorten its lifespan.
- Extreme temperatures can affect the ability of your battery to charge. Battery needs the fit temperature. If the surrounding temperature is over 40°C, the battery cannot be charged.
- Use the battery only for its intended purpose. Never use any charger that is damaged.

Do not short-circuit the battery. Accidental short-circuiting can occur when a metallic object such as a coin, clip, or pen causes direct connection of the positive (+) and negative (-) terminals of the battery. (These look like metal strips on the battery.) Short-circuiting the terminals may damage the battery or the connecting object.

- Leaving the phone in hot or cold places, such as in a closed car in summer or a freezer in winter conditions, will reduce the capacity and lifetime of the battery. Always try to keep the battery between 59°F and 77°F (15°C and 25°C). A hot or cold battery may not function temporarily, even when the battery is fully charged.
- Battery performance is particularly limited in temperatures below freezing.

Mobile phone maintenance

- Keep the device dry. Precipitation, humidity, and all types of liquids or moisture can contain minerals that will corrode electronic circuits
- Do not use or store the device in dusty, dirty areas. Its moving parts and electronic components can be damaged.
- Do not store the device in hot areas. High temperatures can shorten the life of electronic devices, damage batteries, and warp or melt certain plastics.
- Do not store the device in cold areas. When the device returns to its normal temperature, moisture can form inside the device and damage electronic circuit boards.
- Do not attempt to open the device other than as instructed in this guide.
- Do not drop, knock, or shake the device. Rough handling can break internal circuit boards and fine mechanics.
- Do not use harsh chemicals, cleaning solvents, or strong detergents to clean the device.
- Do not paint the device. Paint can clog the moving parts and prevent proper operation.
- Use only the supplied or an approved replacement antenna. Unauthorized antennas, modifications, or attachments could damage the device and may violate regulations governing radio devices.

-
- All of the above suggestions apply to your device, battery, charger, or any enhancement. If any device is not working properly, take it to the nearest authorized service facility for service.
 - If you don't use your phone, it's better to switch it off and remove battery so as to save energy and avoid cellular radiation.
 - Please don't have the volume over loud while using the phone, which might impair your hearing.
 - The unprofessional shouldn't disassemble the terminal and battery of the phone.
 - It is recommended that you should try not to use the holster with magnet button, for the magnet may interfere with the phone signal, and hard iron button may crush the LCD screen. Plastic phone cover will lead to poor volatilization of vapor and have the internal components corrupted, moreover, it can have the phone shell oxidized and faded.
 - If you or your family has a medical record of dizziness or epilepsy, please consult with the doctor first, if you want to play phone games or use the flashlight (the flash doesn't available in all phone models).
 - Please don't put the flashlight too close to the eyes of human beings or animals, as this could do harm to the eyes.

Pacemaker

Pacemaker manufacturers advise the distance between your phone and heart pacemaker should be 6 inches (15.3 cm) at least, otherwise the phone could interfere with the pacemaker.

The personnel who wears pacemaker should do the followings:

Should always keep a distance (at least 9 inches) between the phone and pacemaker, when the phone is switched on.

- Should not have the phone in a upper pocket
- Should listen to the phone closer to the ear which is farther from the pacemaker
- Should avoid the phone falling off from high places.

Caution: The manufacturer assumes no responsibility for the consequences of the users does not comply with the above suggestions or misuse of the phone.

SAR

- The highest SAR value for this mobile phone is < 1.6 W/kg, which recommended the limit for exposure to radio waves is 1.6 watts/kilogram(W/kg) average over 1 gram of tissue. For more information, please visit website www.lavamobiles.com

Safety precautions:

- Use cell phone when the signal quality is good

-
- People having active medical implants should preferably keep the cell phone at least 15cm away from the implant
 - Use a wireless hands-free system (Headphone, headset) with a low power Bluetooth emitter
 - Keep your calls short or send a text message (SMS) instead. This advice applies especially to children, adolescents and pregnant women.

E-waste Disposal Mechanism

'E-waste' means waste electrical and electronic equipment (WEEE). In other words E-waste is a popular, informal name for electronic products nearing the end of their "useful life". For more details about e-waste please refer e-waste rules, 2011 www.moef.nic.in

Do's and Don'ts for disposal e-waste

Do's:

- Ensure that an Authorized Person repairs your Lava products
- Call Our Local Authorized Collection Centers to Dispose Lava products
- Always drop your used electronic products, batteries or any accessories thereof after the end of their life at nearest Authorized Collection Point or Collection Center.
- Separate the packaging material according to responsible waste disposal options and sorting for recycling.
- Always remove the battery from the product, when you do not intend to use the product anymore it in future.

Don'ts:

- Do not Dismantle your Lava Product on your own.
- Do not give your e-waste to KabadiWala / Scrap Dealer/ Rag Pickers.
- Do not dispose-off the e-waste in landfills
- Never dump E-waste in garbage bins.
- Do not dispose of your product at municipal waste bins or rooms.
- Do not throw used batteries into household waste.

Consequences of improper handling and disposal of E-Waste

- Improper disposal of waste prevents natural resources from being re-used.
- Some waste contains hazardous chemicals and if not disposed of properly may release toxins into the soil and water, and also releases greenhouse gases into the environment
- If e-waste is not properly disposed of, it can be a threat to health and well-being of humans and animals and it also has adverse effect on the environment.
- Placing of batteries or devices on or in heating devices, such as microwave, ovens, stoves, or radiators and improper disposal of batteries may lead to explosion.
- If the battery terminals are in contact with metal objects, it may cause a fire.

For more details on how to dispose of your Lava products at the end of life, Please refer the list of our Services Centers on Pan India basis on our website www.lavamobiles.com
Lava Care No.: 1860-200-7500

LAVA WARRANTY CERTIFICATE

Limited warranty:

LAVA international Ltd. (LAVA) provides limited warranty for your mobile phone and original accessories delivered with your mobile phone (hereinafter referred to as “product”)

The warranty period for the transceiver is one (1) year .For Battery, Headset and Charger is six (6) months from the date of purchase.

LAVA Warranty

Subject to the conditions of this Limited Warranty, LAVA warrants a product to be free from defects in design, material and workmanship at the time of its original purchase by you, and for a subsequent period of one (1) year for transceiver and six (6) months for battery & charger.

You shall have the coverage or benefits under this warranty in the event that any of the following conditions are applicable:

- The product has been subjected to abnormal use or conditions, improper storage, exposure to excessive moisture or dampness, exposure to excessive temperature, unauthorized modification, unauthorized repair (including but not limited to use of unauthorized spare parts in repairs), abuse, accidents, Acts of God, spills of food or liquids, improper installation
- You have not notified Lava of the defect in the product during the applicable warranty period.
- The product serial no. code or the accessories date code has been removed, defaced or altered.
- The product has been used with or connected to an accessory (i) Not supplied by Lava or its affiliates, (ii) Not fit for use with the product or (iii) Used otherwise than in manner intended.
- The seals of the product’s battery enclosure have been broken or shown evidence of tempering or the product’s battery has been used in equipment other than that for which it has been specified usable by LAVA.
- All plastic surfaces and all other externally exposed part that is scratched or damaged due to normal use.

To get maximum of your new product, we recommend you to:

- Read the guidelines for safe and efficient use as mentioned in the manual.
- Read the terms and conditions of your Lava warranty in the manual.
- Keep your original receipt; you will need it for warranty services if asked to produce.
- Present this Lava Warranty Certificate along with original proof of purchase whenever you require any warranty services.

In case Lava product needs service, please visit the nearest Lava service centers given in the service guide. Please visit our Website www.lavamobiles.com for updated list of Authorized Service Centers near to your location.

Important note: for your warranty to be valid, all information on the warranty certificate has to be completed including the stamp from the authorized distributor/retailer.

All warranty information, product features and specifications are subject to change without notice.

IMEI No.

Dealers Stamp

Date of purchase

Model No.