

InFocus

InFocus

Quick Start Guide

M812i

Introduction

 
Thank you for choosing InFocus M812i. Before using the phone, is advised that you read this **Quick Start Guide** to better understand the basic functions.

For more detailed information, see the User Guide.
www.infocusphone.com

Content

Your Phone	2
Installing SIM Card and Memory Card	3
Charging the Battery	4
Initial Start Up	4
Home Screen	4
Making Your First Call	5
Contacts	6
Sending a Text Message	7
Setting up WLAN	7
Setting up Email Account	8
Sending and Receiving Emails	8
Using Browser	9
Using Bluetooth	10
Taking Photos and Videos	10
Viewing Photos and Videos	12
Basic Phone Settings	13


Your Phone

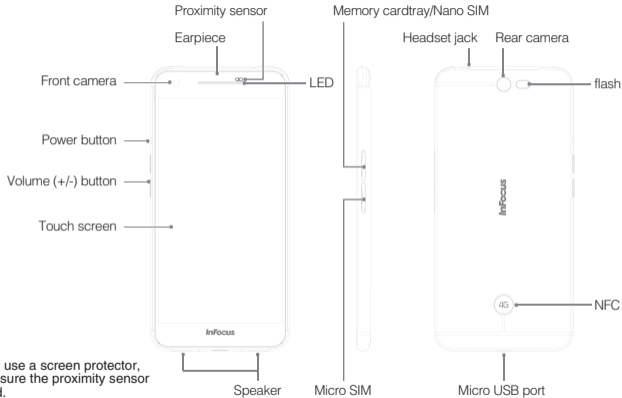

Remark:
If you want to use a screen protector,
please make sure the proximity sensor
is not blocked.


Installing SIM Card and Memory Card

 1. Find the small opening on the right bottom side of the phone.

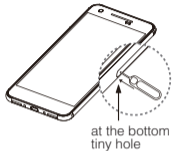


2. Use the pin provided to eject the tray, and pull out the tray with your thumb and index finger.

 3. Put the micro SIM card onto the tray, metal pin face downwards, and insert the tray back to the phone.

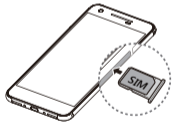


4. Find the small opening on the upper part of the phone.

 5. Use the pin provided to eject the tray, and pull out the tray with your thumb and index finger.

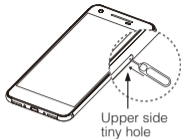

6. Put the the micro SD card onto the tray, metal pin face downwards, and insert the tray back to the phone.

 (when using this slot as 2nd SIM, please make sure you use nano SIM and change the direction at 90 degree)

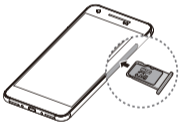

Please use the eject pin provided in the gift box. Should you lose it, please kindly contact InFocus customer service.

Remark:

Upper card slot can be used as SD card or 2nd SIM card slot, one at a time. In 2nd SIM scenario, there will be no data service available, only GSM voice capability.

Charging the Battery

Before you turn on the start using InFocus M812i, it is recommended that you charge the battery with the power adapter and USB cable provided in the gift box.

1. Insert the small end of the USB cable into the USB connector at the phone bottom.
2. Insert the other end of the USB cable into the power adapter, and plug the power adapter to an electrical outlet to start charging the battery.
3. The LED light will turn to green once the battery is fully charged.



Warning

- As a safety precaution, please make sure the charging only takes place indoors and in dry environments.
- The device will stop charging if it overheats, and automatically resume charging whenever the temperature drops below the threshold again.

Initial Start Up

When you switch on M812i for the first time, please indly follow the onscreen instructions to set up your personalization.

Some features might require internet access in order to synchronize your online account and location-based services. You can also enable or disable them in settings later on.

Home Screen


From the status bar on top, you can also a quick view of the missed call notifications, message received, battery power level, and connectivity signal strength etc.

Main home screen can be personalized by moving your favorite applications to hot seats for quick access all the time, or creating folders with different groupings.



Slide the home screen horizontally, you will discover more space for other widgets and applications.



Making Your First Call

From the Home screen, tap .

To make a call

1. Enter the phone number on the keypad.
2. Tap  to correct any wrong number. Tap and hold  to erase the entire entry.

NOTE:

To call a contact, tap from the contact list.

3. Tap to  make a call.
4. To hang up, tap .

 
NOTE:

If you have inserted two SIM cards, select the desired SIM network.



To answer a call

To answer a call, tap  and drag it to the right .

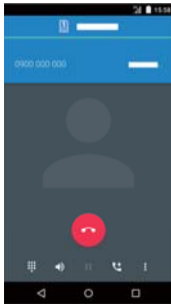




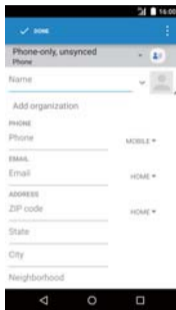 
NOTE:

When you tap , it automatically changes to .



Contacts

Adding contacts

1. From the Home screen, tap .
2. Tap  to add a contact.
3. Select one of the location to store the contact to (SIM-only or Phone-only).
4. Enter the contact information such as name, phone number, email address, etc.
5. Tap  to save the contact.






Importing contacts

1. From the Home screen, tap .
2. Tap  > **Import/Export**, and choose to Import/export contacts from or to the SIM card/storage.
3. Select the contacts location that you want to copy to or copy from, and tap .





Sending a Text Message

1. From the Home screen, tap .
2. Tap .
3. In the To field, enter the recipient's phone number or name.
4. Compose your message.
5. Tap  to send your message.

 


Setting up WLAN


1. From the Home screen, tap .
2. In WIRELESS & NETWORKS, tap WLAN and turn it to on.
3. Tap the network you want to connect to from the available list. Or tap  to manually add a new connection.


NOTE:

Connecting to a secured network will require for a password. Enter the password, then tap **Connect**.

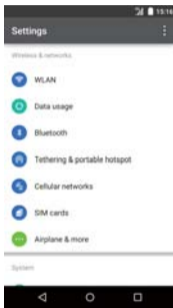

Setting up Email Account

 1. From the Home screen, tap .
2. Enter your **Email address** and **Password** and tap **Next**.
3. Set the **Inbox checking frequency** settings and tap **Next**.
4. Enter **Name** and **Account display name**.
5. Tap **Next**. Once the account setup is complete, the device will automatically retrieve your emails.

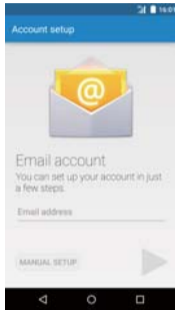






Remark:

If your workplace use MicroSoft Outlook, please select "Exchange" with account type page.

Sending and Receiving Emails

Composing and sending emails

 1. From the Home screen, tap, tap  an email account.
2. Tap .
3. In the **To** field, enter the recipient's email address.
4. Enter the **Subject**.
5. Compose your email.
6. Tap  to add an attachment.
7. Tap  to send an email.

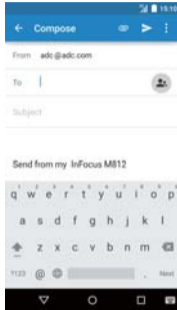





Receiving emails

The device will automatically refresh the incoming emails according to the synchronization frequency defined.




Using Browser To open a web page

1. From the Home screen, tap .
2. Tap the address bar.
3. Type the URL then tap **Go**.
4. Tap  to open New page with .
5. Tap  to save the URL as a bookmark.






Using Bluetooth

1. From the Home screen, tap .
 2. In **WIRELESS & NETWORKS**, tap **Bluetooth** and turn it on.
 3. Refresh the list if you cannot find desired devices.
 4. Tap the device you want to **pair**.
 5. To start pairing, enter the **PIN** then tap **OK**.
- NOTE:**
- The PIN of the device must be the same PIN on the other bluetooth device.
 - On some devices simply, tap **Pair** to start pairing.
6. The paired Bluetooth device name is displayed.



Taking Photos

This device is equipped with rear and front cameras for both photo taking and video recording.

1. From the Home screen, tap .
- NOTE:**
- To switch between front and rear cameras, tap .
2. Just point the camera on what you want to capture. The camera adjusts the focus automatically, and continuously refocuses as you move it.
 3. Tap  to take the shot.



To record video

1. From the Home screen, tap .
2. When you are ready to start recording, tap .




NOTE:

To switch between front and rear cameras, tap .


3. Tap  to stop recording.




To take a panorama shot







1. From the Home screen, tap .
2. Tap  and select Panorama.
3. When you are ready, tap  to take the shot.
4. Move the device horizontally and smoothly to one direction.



5. When the shooting guide reaches the end of the shooting point, the shooting stops. You can also manually stop recording by tapping .

Viewing Photos and Videos

1. From the Home screen, tap .
2. Select the folder to glance pictures and videos in thumbnail images.
3. Tap an image or a video to view in full screen.
4. Swipe your finger to the left/right to view the previous/next file.

- If want to share the video/photo, please enter  to share.
- If want to delete the video , please press  then select **Delete** and then click **OK**.
- To play the video, tap .
- If you want to upload files to cloud storage, press  then select **Upload** and sign into the clouds album.
- To play the slideshow for more options, tap .
- To edit the image, tap  for special effect.



Basic Phone Settings

Adjusting the volume

There are two ways to adjust the volume:

- Press the volume (+/-) button manually to adjust the volume, or press the volume button once. Drag the volume bar to adjust the volume.



Setting an alarm

1. From the Home screen, tap




2. Tap .

3. To add an alarm, tap .

4. To set the time, slide the pointer, and tap **Done**.

5. To set repeat mode, check Repeat and select the desired week days.

6. To set the ringtone, tap , and select the alarm ringtone.


7. To enter an alarm label, tap **Label** tap label to name the alarm. Tap **OK** to save.

 
 
 
NOTE:

By default the alarm is set on.




Change desktop mode

1. Long press the empty space on the home screen.
2. Tap . The Launcher + page opens.
3. Tap **Layer mode setting** tab.
4. Choose **One layer** or **Two layers**.

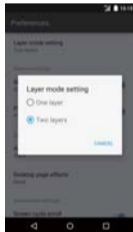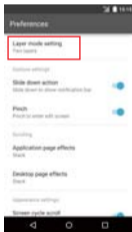

The result is displayed as follows:

Under the two layer mode, all applications on the original desktop can be accessed through  hot seat button.

One layer



Two layers



Important Safety Information

Please read before proceeding

- DO NOT place sharp objects on top of the device, as they may scratch the screen.
- DO NOT drop your device or subject it to severe impacts. Bending the body and pushing the display or keys with extreme force could damage the device.
- DO NOT use a pen or any sharp object to tap the screen.
- DO NOT expose the device to dirty or dusty environments.
- DO NOT place the device on an uneven or unstable surface.
- DO NOT insert any foreign objects into the device.
- DO NOT expose the device to strong magnetic or electrical field.
- DO NOT use or store this equipment in a place where it will be exposed to high temperatures, such as near an open flame or heat-emitting equipment.
- DO NOT use it or store it where fluids such as water can splash onto it. Raindrops, water spray, juice, coffee, steam, or other types of liquids will also cause malfunctions.
- Refer to the rating label on the device and be sure that the power adapter complies with the rating. Only use accessories provided by the manufacturer.
- Disconnect the device from an electrical outlet and power off before cleaning the device.
- NEVER attempt to connect or disconnect the power adapter with wet hands.
- Clean the touch screen with a soft cloth. If needed, dampen the cloth slightly before cleaning. Never use abrasives or cleaning solutions.
- DO NOT disassemble the device. Only a certified service technician should perform repair.
- Please check with your Local Authority or retailer for proper disposal of electronic products.
- For USB connection, users must use a USB 2.0 (or higher version) cable.
- The adapter shall be installed near the equipment and shall be easily accessible.

- The temperature of the device might increase while the CPU is busy handling resource consuming activities such as high resolution video decoding. The SW protection mechanism will ensure stop charging whenever the temperature is over the predefined threshold and prepare for shut down if necessary. Please worry not.
- Use a wireless hands-free system (headphone, headset) with a low power Bluetooth emitter.
- Make sure the cell phone has a low SAR.
- Keep your calls short or send a text message (SMS) instead. This advice applies especially to children, adolescents and pregnant women.
- Use cell-phone when the signal quality is good.
- People having active medical implants should preferably keep the cell phone at least 15 cm away from the implant.

Safety Precautions for Battery Use

- The phone battery can not be removed, please do not disassemble.
- There is the danger of explosion if disassemble by unauthorized personnel.
- Recycle or dispose used batteries according to the local regulations.



Road and Environmental Safety

- Turn off the phone in areas with a potentially explosive atmosphere or where flammable objects exist such as gas stations, fuel depots, and chemical plants among others. Sparks from these areas could cause explosion or fire and result in injury or even death.
- Do not use hand-held phones while driving a vehicle. Use hands-free devices as an alternative.

Safety in Aircraft

Do not use the phone on board an aircraft. The phone's network signals may cause interference to the navigation system. As a safety measurement, it is prohibited to use mobile phones on board in most countries.

Copyright Information

- Copyright© InFocus Corporation, 2014. All rights reserved.
- This product has an Android™ platform based on Linux, which can be expanded by a variety of JME-based application SW.
- Google \ Google Play \ Android and other marks are trademarks of Google Inc.
- microSD™ is a trademark of SD Card Association.
- All products use in this device and trademarks mentioned herein are trademarks or registered trademarks of their respective owners.
- LTE is a trade mark of ETSI

Intellectual Property Right Information

Right to all technologies and products that comprise this device are the property of their original owners respectively.

This product has an Android™ platform based on Linux, which can be expanded by a variety of Java-Script-based application SW.

Compliance Information

SAR Information

THIS MOBILE DEVICE MEETS GUIDELINES FOR EXPOSURE TO RADIO WAVES. Your mobile device is a radio transmitter and receiver. It is designed not to exceed the limits for exposure to radio waves recommended by international guidelines. These guidelines were developed by the independent scientific organization ICNIRP and include safety margins designed to assure the protection of all persons, regardless of age and health. The exposure guidelines for mobile devices employ a unit of measurement known as the Specific Absorption Rate or SAR. The SAR limit stated in the ICNIRP guidelines is 1.6 W/kg averaged over 1 grams of tissue. Tests for SAR are conducted using standard operating positions with the device transmitting at its highest certified power level in all tested frequency bands. The actual SAR level of an operating device can be below the maximum value because the device is designed to use only the power required to reach the network. That amount changes depending on a number of factors such as how close you are to a network base station. The highest SAR value under the ICNIRP

guidelines for use of the device at the ear is 0.701 W/kg and at the body is 0.591 W/kg (The measure distance of 1.5 cm). Use of device accessories and enhancements may result in different SAR values. SAR values may vary depending on national reporting and testing requirements and the network band.

WEEE Notice

The WEEE logo on the product or on its box indicates that this product must not be disposed of or dumped with your other household waste. You are liable to dispose of all your electronic or electrical waste equipment by relocating over to the specified collection point for recycling of such hazardous waste. Isolated collection and proper recovery of your electronic and electrical waste equipment at the time of disposal will allow us to help conserve natural resources. Moreover, proper recycling of the electronic and electrical waste equipment will ensure safety of human health and environment. For more information about electronic and electrical waste equipment disposal, recovery, and collection points, please contact your local city center, household waste disposal service, shop from where you purchased the equipment, or manufacturer of the equipment.

RoHS Compliance

This product is in compliance with DIRECTIVE 2011/65/EU OF THE EUROPEAN PARLIAMENT AND OF THE COUNCIL of 8 June 2011, on the restriction of the use of certain hazardous substances in electrical and electronic equipment and its amendments.

Warranty Statement

Limited warranty

InFocus provides "Product Warranty Statement", at the time of its original purchase, from the InFocus or its authorized distributor, describing the product warranty service.

Notes: InFocus does not provide global cross border warranty.

This limited warranty (free of defects in materials and workmanship causing malfunction and defective) shall last for twelve (12) months for the device and six (6) months for the battery from the purchase date. Other than battery, the in-box accessories, including cosmetic parts, button, cables, earphone, AC ... etc. if applied; six (6) month open-box functional failure warranty is provided. The customer shall present the PROOF OF PURCHASE upon claiming the warranty. Throughout the warranty period InFocus or its authorized agent will, at own discretion and subject to section Non-Warranty below repair or replace a defective product. All replaced defective parts or components will become the property of InFocus after returning the repaired/replaced product in good working condition. This repair on the same symptom, one (1) month repair warranty is provided.

Non-Warranty

No warranty may be asserted or claimed if (1) the product serial number, date code, IMEI, water indicator or the warranty seal has been removed, erased, defaced or altered; or (2) the defect is found to be caused by:

- (1) By engineering judgement, the product is mishandled/misused carelessly or accidentally. Unauthorized disassembling or repair, repair by use of unauthorized spare parts, or other actions beyond the reasonable control of InFocus.
- (2) Improper shipping and packing.
- (3) Forces of nature or willful misconduct.
- (4) Rough handling, exposure to moisture, dampness or extreme thermal or environmental conditions or a rapid change in such conditions, corrosion, oxidation, unauthorized modifications or connections.
- (5) Deterioration of the product due to normal wear and tear.
Products installed or integrated with software or applications which are not made or authorized by InFocus.

Be sure to back up data and remove any confidential, proprietary or personal information from the product when asking service.

InFocus is not responsible for the damage to or loss of any

programs, data, or removable storage media inside or sent with the products. As to Non-warranty product, InFocus will check if a repair is economical/ available and provide a chargeable service to customer's consideration.

IN NO EVENT SHALL InFocus BE LIABLE UNDER THIS LIMITED WARRANTY FOR LOSS OF PROFIT. LOSS OF ANTICIPATED SAVINGS, LOSS OF DATA OR INDIRECT LOSS, LOSS OF THE PRODUCT OR ANY ASSOCIATED EQUIPMENT, INCIDENTAL OR CONSEQUENTIAL LOSSES OR DAMAGES OF ANY NATURE WHATSOEVER TO THE FULLEST EXTENT THAT THOSE LOSSES OR DAMAGES CAN BE DISCLAIMED BY LAW.



PKVN255002A