









## Turning Power On and Off

- ▼ **Turning Power On**  
Hold down  for at least one second.
- ▼ **Turning Power Off**  
Hold down  for at least two seconds.

## Checking Your Own Phone Number and E-mail Address

On the stand-by screen: Press . ▶ Press .

## Making and Answering a Call

- ▼ **Making a Call**  
On the stand-by screen: Enter the phone number you want to call. ▶ Press .
  - To adjust the earpiece volume: Use .
  - To end a call: Press .
- ▼ **Answering a Call**  
When the phone starts ringing, press .
  - To adjust the earpiece volume: Use .
  - To end a call: Press .

## Storing and Recalling a Memory Dial Data

- ▼ **Storing Data**  
On the stand-by screen: Hold down  for at least one second. ▶ Use  to select the Memory Dial record you want to edit and press . ▶ Enter the data

and press . ▶ Press when finished. ▶ Use to set the record No. ▶ Press .

### ▼ Recalling Data

On the stand-by screen: Press . ▶ Use to select the Memory Dial record you want to recall. ▶ Press .

## Using the Camera

### ▼ Taking a Snapshot

On the stand-by screen: Press . ▶ Use to select カメラ and press . ▶ Use to select フォト and press . ▶ Press or to take a snapshot. ▶ Press to store the photo.

- To switch from Photo mode to Movie mode: Press .

### ▼ Recording a Movie

On the stand-by screen: Press . ▶ Use to select カメラ and press . ▶ Use to select ムービー and press . ▶ Press or to start recording. ▶ Press or to stop recording. ▶ Press to store the movie.

- To pause recording: Press .
- To switch from Movie mode to Photo mode: Press .

## Making an International Call

Ex. To Call 212-123-△△△△ in the USA

▶ ▶ ▶ ▶ △△△△ ▶

International access code      Country code (USA)      Area code      Number you want to call

## English Voice Mail Answering Messages

You can configure Voice Mail to play operation instructions and answering messages in English.

On the stand-by screen: Press . ▶ Press . ▶ Press . ▶ Press . ▶ Press .

## Other Features

### ▼ Silent Mode

On the stand-by screen: Hold down for at least one second.

- To disable Silent Mode: Hold down for at least one second on the stand-by screen.

### ▼ Easy Voice Recording

On the stand-by screen: Hold down for at least one second.

- To disable Easy Voice Recording: Hold down for at least one second on the stand-by screen.

### *For inquiries please contact*

au Customer Service Center (General Information)

- If you are calling from a landline phone: 0077-7-111 (toll free)
- If you are calling from an au mobile phone: 157 (toll free)