



10 The User Manual

Foreword

Welcome to VKWORLD and thanks for purchasing our products. For the best performance, we recommend you read the manual carefully, especially the "safety instructions".

This manual is a simple guide for your reference. If you have any doubt, please contact us.

All rights reserved by VKWORLD.
vkworld official: www.vkworld.cc

To know the phone

Home key: Press to back to the main interface of default.

Main key: Press to see the current interface

Return key: Return to the last interface

Power button: Turn on/off the screen; press long to turn on/off the phone

Volume key+: Increase the volume

Volume key-: Reduce the volume

Screen shot: press volume key+ and power key together

Starting to use

Insert the SIM

This phone supports double SIM double standby, GSM/WCDMA.

Insert the SIM/MicroSD card: before doing this, please make sure the device has shut down.

Pay attention to some SIM cards that mobile phones may not match, please consult the service provider to replace.

Make sure the phone is shut down when you open the back and take out the battery.

Charge battery

You'd better use original accessories to charge, or you shall take the responsibility if any damage caused by any improper charge.

Pay attention: Initial several times to use new battery, please after full charge and full discharge for several times, and for 10 hours, in order to achieve the best performance.

Application menu

Open and switching applications

1. Open: click its icon on the main screen.
2. Return to the main screen: click the Home button.
3. Quickly switch between applications that are using. Multitasking also allows some applications running in the background.
4. Click the Home button for 3 seconds for recently used application.

Run

1. Drag to move up or down to scroll the screen.
2. Drag to move finger to scroll will not select or activate any content on the screen.

Dial

Make and receive calls.

Contact

In "contacts" screen, quick to call make a phone call, to create a new E-mail, message, find the position of the other, and perform more operations.

Call logs

You can view your recent call situation.
Received calls: show all answered calls.
Dialed numbers: show all dialed calls.

Backup and restore

Need to insert the TF card to backup of data and application.

E-Mail

Set up email account

Check and read email

In the Mail, "mailbox" screen allows you to quickly access all of your email in-box and other. When you open the mail, E-mail will retrieve and display the latest, and at the top of the screen shows the number of unread mail.

Browser

View the web page like "Call Making a call" by "CM" it.

Google

Type any character to find information/use

Search

Type any character to find information/use

Multimedia

Music

With "music" application to enjoy music collection. According to the artist, album, song.

Camera

This machine is divided into front and back camera. Mainly on the back of the camera. You can use the screen to control the camera and view your photos or video. Gallery to view images.

Video player

Use to play the video.

Video recorder

Set the parameter of DV and then use this function.

Sound recorder

Select this feature, press the center button for the recording.

Click the file: view the current recording file.

FM radio

Search channels.

Messages

Send and receive messages.

The messaging is a network service. Sending and receiving TEXT and MMS can only be used if the service is proposed by your network operator.

Calendar

The "calendar" allows you to access your calendar, and events.

View calendar

Light switch display mode: press the "day", "week", "month", "schedule".

By date show that slide up or down to see the one day of weekly events in view.

View: gently by one day to see the weekly event.

View: to one day to see the events of the month.

Schedule show: all the dates and events will appear in the scrolling list.

Add an Event

You can directly in the machine to create and update the calendar events, clicking on add a new activity.

File Manager

Can view the phone and SD card storage file. Insert the USB line, mobile phone can be stored and stored in the SD card files in the application of the website such as mobile Internet or MP3 and pictures will be shown in the download Downloads.

Use the following keys: search keys, speaker, timer.

Play store
You can download it from play store that is directly applied to your phone.

Other functions

Count down

Mobile phone built-in countdown function. Set a time, you can click on the bottom of the screen icon to start the countdown. Time arrives, the phone automatically.

Seconds counter

Use a stopwatch to event timing: lightly press "stopwatch" select "start" to enable a stopwatch.

To record the time back and forth, back and forth in each light after press "watch". If you want to suspend a stopwatch, please press "stop" light. Gently press "start" to continue. If a stopwatch is to be reset, please light when a stopwatch to suspend the press the "reset".

Calculator

Light according to the number and function in the "calculator", just like you use the standard calculator. To add, subtract, multiply or divide button, the button will light, to let you know to perform operations. Recorded voice memo, gently press "play" button, then press "play" to suspend play.

Settings

To access the Settings menu: in the menu mode

Network

Wireless networks
SIM management
Can be set up single or double card master card and set the machine operation Wi-Fi. Open or close the WiFi function

Bluetooth

Within 10 meters, you can set up a wireless connection between electronic devices via Bluetooth, to send pictures, video, digital data, etc.

Audio profile

You can select the desired scene mode according to need. Scene mode option: standard, silent, meeting, outdoor, headset, this factory has done several patterns and Settings, you can customize the Settings.

1. Vibration: the bell won't ring
2. Volume: can be adjusted by rilling up and down the ball path to ring the bell and the volume of the sound
3. Ringtone: to set the phone ring
4. Notification ringtone: can be set to notify the bell
5. Choose sound: operation Settings screen to choose whether to play sounds
6. Prompt: screen lock and unlock the screen broadcast voice switch
7. Touch: if there is a touch, switch can touch screen

Display

Set the wallpaper
Automatic rotary screen
Set interface
Font size
Darkness: the mobile phone is not operating in a set of time automatically off screen

Storage

Show a mobile phone internal storage capacity and storage capacity of the SD card

Show a mobile phone battery used time and specific power consumption

Apps

To manage your applications, to delete the machine application, mobile storage location.
Location information access
Can set access my location information
Positioning system
A virtual private network Settings, you can set up wireless network or using a GPS satellite. At the same time open A - GPS can quickly locate your current position

Security

Screen lock: lock screen set to slide/voice unlocked/design/PIN/combination lock.
Main information: edit the information, in the locked state displays edit content.
Unknown sources: open allows installing applications from unknown sources, otherwise not. Certificate of the credential storage, can be installed from the SD card.
Language and input method.
Can set the phone language and input method.

Backup & reset

Reset the phone to default.
Restore the factory Settings: remove all the data on the phone.

Accounts

Background data: when binding Google account or company account, the application can be automatically synchronized calendar, calendar, contacts, email in the Google account.
Automatic synchronization: when binding account application will synchronize data.
E-mail: show email account

About phone

Show a mobile phone version of the system and hardware information

Battery maintenance

1. This phone is a rechargeable battery as a power source. When power weak, please send the battery. To maintain battery life, the best will run out the battery before charging ;
2. When the battery charger is not used, please with the power supply as a spare. Do not connect the charger with battery more than a week, over charge will shorten the battery life ;
3. Temperature influence the limits of the battery to charge. So, before charging the battery may need to be cool or warm. If the battery more than 40 degree Celsius temperature, the battery can't charge ;
4. Temperature influence the limits of the battery to charge. So, before charging the battery may need to be cool or warm. If the battery more than 40 degree Celsius temperature, the battery can't charge ;
5. Do not use the damaged cells ;
6. Put the battery in the extremely cold or hot place can lead to shorten the battery life, battery exposed to cold or hot place may lead to can't normal mobile phone function, even rushed out battery ;
7. Please don't put battery in the fire! Please according to the local regulation to deal with waste batteries.

Please read this safety information carefully so that you can use your phone in complete safety.

1. Children : Be very careful with children and your phone. A mobile phone contains a number of detachable parts. Exercise great care when children are in close proximity to the phone. The phone contains small parts that could be swallowed or cause choking. If your phone is equipped with a camera or lighting device, do not use it too near children or animals.
2. Hearing : Prolonged listening at full power using a lightweight headset or headphones can damage your hearing. Reduce the volume to the lowest possible level when listening to music or conversations. Avoid high volumes over extended periods.
3. Driving : Exercise care when driving. Driving requires maximum attention at all times in order to minimize the risk of accidents. Using a mobile phone can distract the user and result in an accident. You must fully comply with the local regulations and laws in force regarding the use of cell phones whilst driving. You are not allowed to use the phone whilst driving. A hands-free kit should not be regarded as an alternative solution. Fly. Turn your phone off when flying. Remember to turn your phone off when you are in a plane (GSM + Bluetooth) as it may cause interference.
4. Hospitals : Turn your phone off near any medical devices. It is extremely dangerous to leave a phone switched on near medical devices as it may cause interference. You must observe any instructions or warnings in hospitals and treatment centres. Remember to turn your phone off in service stations. Do not use your device in a petrol station near fuel. It is dangerous to use your phone inside a professional garage.
5. Electronic implants and pace makers : Users who wear a pacemaker or who are fitted with an electronic implant must hold the phone on the opposite side to their implant (as a precaution when making a call). If you notice that your phone is causing interference with a pacemaker, switch it off immediately and contact the manufacturer of the pacemaker for advice on what action to take.
6. Fire hazard : Do not leave your device near heat sources such as radiators or cookers. Do not leave your phone charging near flammable materials as there is a real risk of fire.
7. Contact with liquid : Do not expose the phone to liquid or touch it with wet hands - any damage caused by water may be irreparable.
8. Use only VENDOR-approved accessories. The use of unauthorised accessories may damage your phone or cause a safety risk.
9. Do not destroy the batteries and chargers. Never use a battery or charger that has been damaged, keep batteries away from magnetic objects as the latter might cause a short-circuit between the positive and negative terminals of your batteries and permanently destroy the battery or phone. As a general rule, you should not expose the batteries to very high or low temperatures (below 0°C or above 45°C). Differences in temperature may reduce battery autonomy and service life.
10. Shocks and impact : Handle and use your phone with the utmost care. Protect your phone: shocks and impact may damage it, some parts of your phone are made from glass and might break if the phone is dropped or is subject to severe impact. Avoid dropping your phone. Do not touch the screen with sharp objects.
11. Electric shock : Do not try to dismantle your phone as there is a very real risk of electric shock.
12. Maintenance : if you want to clean your handset, use a dry cloth (do not use a solvent, such as benzene, or alcohol).
13. Recharge your phone in a well ventilated area. Do not recharge your device when it is resting on a soft surface.
14. Damage to magnetic strips : keep your phone away from credit cards as they may damage the data on the magnetic strips.